

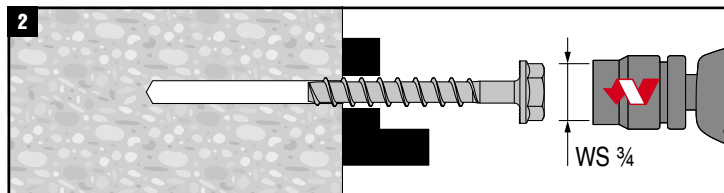


KWIK HUS-EZ CRC	h_1^*	t_{fix}
$\frac{1}{2} \times 3$	$3\frac{3}{8} - t_{fix}$	$0 \dots \frac{3}{4}$
$\frac{1}{2} \times 4$	$4\frac{3}{8} - t_{fix}$	$0 \dots 1$
$\frac{1}{2} \times 5$	$5\frac{3}{8} - t_{fix}$	$0 \dots \frac{3}{4}$
$\frac{1}{2} \times 6$	$6\frac{3}{8} - t_{fix}$	$0 \dots 1\frac{3}{4}$

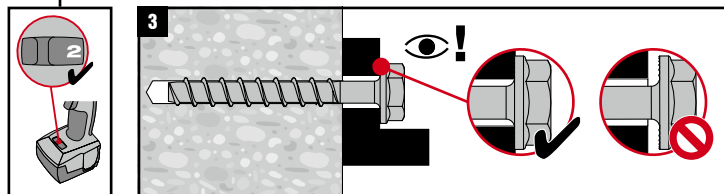

	$h_{nom} < 3$	$h_{nom} \geq 3$
SIW 6AT-A22	✓	✓
SIW 22T-A	✗	✗
	45 ft-lb	25 ft-lb

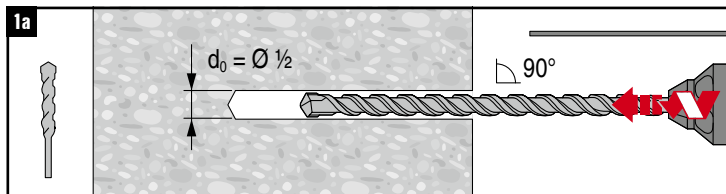

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.