

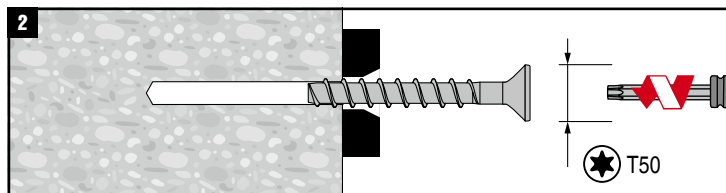


KWIK HUS-EZ C SS316	h_1^*	t_{fix}
$\frac{3}{8} \times 2\frac{1}{2}$	$2\frac{3}{4} - t_{fix}$	$\frac{1}{4} \dots \frac{1}{2}$
$\frac{3}{8} \times 3$	$3\frac{1}{4} - t_{fix}$	$\frac{1}{4} \dots \frac{1}{2}$
$\frac{3}{8} \times 4$	$4\frac{1}{4} - t_{fix}$	$\frac{1}{4} \dots \frac{3}{4}$

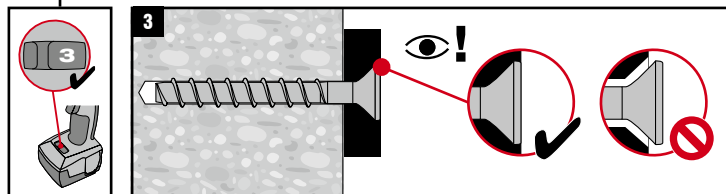

2.1		
SID 4-A22	✓	✓
SIW 6AT-A22	✓	✓

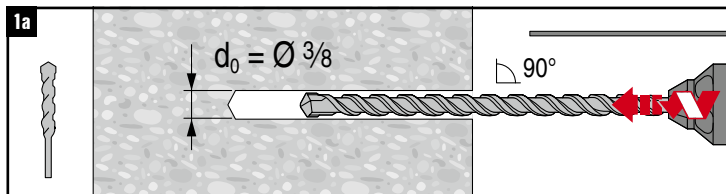

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.