

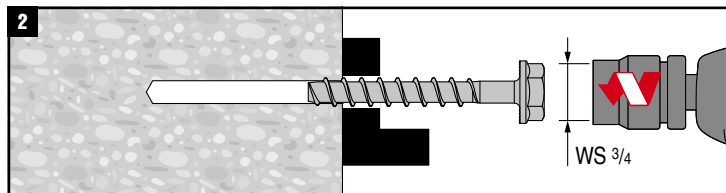


KWIK HUS-EZ SS316	h_1^*	t_{fix}
$\frac{1}{2} \times 3$	$3\frac{3}{8} - t_{\text{fix}}$	$0 \dots \frac{3}{4}$
$\frac{1}{2} \times 4$	$4\frac{3}{8} - t_{\text{fix}}$	$0 \dots 1$
$\frac{1}{2} \times 5$	$5\frac{3}{8} - t_{\text{fix}}$	$0 \dots \frac{1}{2}$

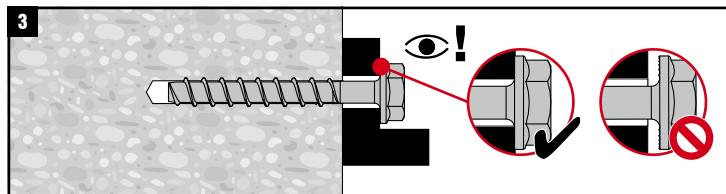

2.1			
SIW 6AT-A22	✓	✓	✓
SIW 22T-A	✓	✗	✗

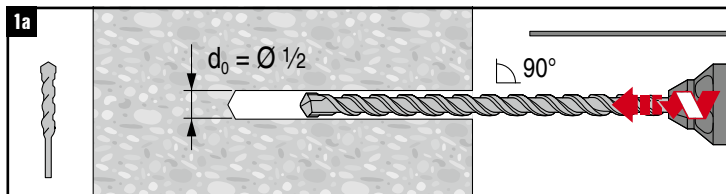

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.