

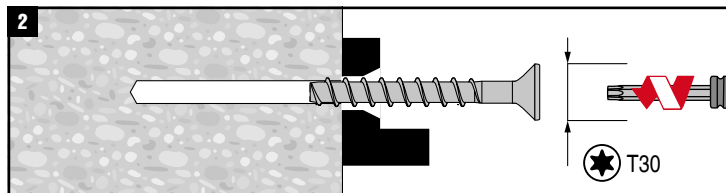


KWIK HUS-EZ C	h_1^*	t_{fix}
$\frac{1}{4} \times 2$	$2\frac{3}{8} - t_{fix}$	$\frac{1}{8} \dots \frac{3}{8}$
$\frac{1}{4} \times 2\frac{1}{2}$	$2\frac{7}{8} - t_{fix}$	$\frac{1}{8} \dots \frac{7}{8}$
$\frac{1}{4} \times 3$	$3\frac{3}{8} - t_{fix}$	$\frac{1}{8} \dots 1\frac{1}{2}$
$\frac{1}{4} \times 4$	$4\frac{3}{8} - t_{fix}$	$\frac{1}{8} \dots 1\frac{1}{2}$

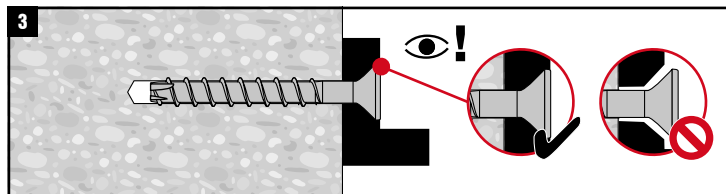

2.1		
SID 4-A22	✓	✓
SIW 6AT-A22	✓	✓
	18 ft-lb	21 ft-lb

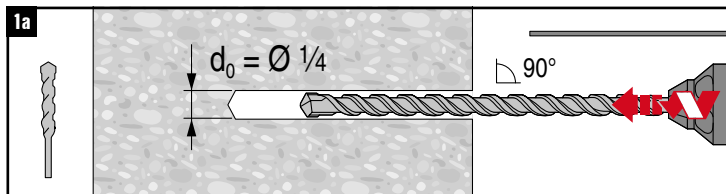

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.